

TITAN™ 70

Charger / Power Supply

OWNER'S MANUAL

TABLE OF CONTENTS

INTRODUCTION 1

FEATURES..... 1

SAFEGUARDS.....2

GROUNDING/EARTHING.....2

Charging 3

Applications 3

Three Stage Charging Methodology 4

LED Indications.....5

OPERATION AS DC CAMERA SUPPLY FROM MAINS 6

POWER LOSS 6

FCC NOTICE.....7

SPECIFICATIONS.....7

FUSE/TYPE REPLACEMENT 7

WARRANTY 8

INTRODUCTION

The TITAN 70 is the smallest and lightest package available in both a charger and power supply. It incorporates all of the Logic Series circuits that are employed in every Anton/Bauer charger. The fast charge feature makes it an ideal complement to a current Anton/Bauer battery system and given its small size is ideal for travel.

Like all Anton/Bauer chargers, everything is automatic. Once a battery is placed onto the charger, it will automatically go into one of the Three Stage Charging modes. If the unit and battery are then attached to a piece of equipment, the power supply mode will prevail, stopping all charging. Once the camera/camcorder is turned off, the TITAN 70 will continue charging the battery, remembering where it previously stopped.

FEATURES

- 70 Watt Power Supply.
- Fast Charging. One hour with most batteries (2 hours with HyTRON series batteries).
- Logic Series technology.
- Wide Range Input (90-250vac 50/60Hz).
- Six (6) Independent Charge Termination Systems.
- Lightweight (16 oz.)

SAFEGUARDS

Power Sources: This unit was designed to operate at mains voltages from 90 to 250 Volts AC, 50-60 Hz.

Risk of Electrical Shock: Refer servicing to qualified service personnel.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

GROUNDING/EARTHING

IMPORTANT WARNING: THIS APPARATUS MUST BE EARTHED.

To ensure safe operation, the three pin plug supplied must be inserted only into a standard three-pin power point which is effectively grounded through the normal household wiring. Extension cords used with the equipment must be three-conductor and be correctly wired to provide connection to earth ground. Improperly wired extension cords are a dangerous electrical hazard.

The fact that the equipment operates satisfactorily does not imply that the power point is properly grounded and that the installation is completely safe. If any doubt exists about the correct grounding of the power point, consult a qualified electrician.

IMPORTANT: The wires in this mains lead are colored in accordance with the following code:

Green and yellow	Earth
Blue	Neutral
Brown	Live

Charging

As with all Anton/Bauer chargers, charging with TITAN 70 is fully automatic. Mount any Logic Series battery to the TITAN 70 and it will automatically determine the appropriate charge routine and execute it.

Applications

The Titan 70 will charge any Anton/Bauer Logic Series Gold Mount battery including model: ProPac 13/14, Trimpac 13/14, Digital ProPac 13/14, Digital Trimpac 13/14, HyTRON, or ProFormer battery.

NOTE: Anton/Bauer always recommends that each battery has its own charge position. A battery can remain on an Anton/Bauer charger indefinitely.

The TITAN 70 incorporates the exclusive InterActive communication between battery and charger, which allows the charger to identify any Anton/Bauer battery attached and determine the precise charge routine for that battery under the prevailing conditions.

NOTE: Due to the specialized communications between the charger and the battery, batteries without the Logic Series construction and communication capability (manufactured by Anton/Bauer before 1989 as well as so-called “rebuilt”) can not be charged with this charger. The InterActive communication of Logic Series batteries is the key which allows the TITAN 70 to safely identify and address new style and chemistry batteries as they are developed. Moreover, this communication ensures that batteries contain the quality cells, workmanship and safety of genuine Anton/Bauer products. If a non-Logic Series battery is placed on the charger, the red and green LED indicators will flash alternately. This indication means that the battery cannot communicate its identity to the TITAN 70 and is not charging. After 30 seconds of flashing green and red LED’s, the red LED will remain on, indicating a HOLD state.

WARNING: USE OF THIS CHARGER WITH ANY BATTERY NOT MANUFACTURED BY ANTON/BAUER MAY RESULT IN BATTERY DAMAGE AND CAUSE RISK OF FIRE OR PERSONAL INJURY.

Three Stage Charging Methodology

In general, the TITAN 70 will deliver a **three stage charge routine** to each battery.

1. **Stage One** will deliver a high rate charge matched to the capabilities of the battery (typically a one or two hour rate, depending on battery type). During this stage, six separate cutoff methods are in operation, simultaneously, ensuring the fastest, safest charge for that battery:

TCO - Temperature cutoff which stops the Stage one charge precisely when a temperature indicative of full charge is reached;

Dt/dT - A microprocessor based algorithm which measures a rise in temperature over a specific time, very accurately indicating full charge. This method is also the recommended method for charging Ni-MH technology;

-ΔV - A method to determine the end of stage one charging by identifying a characteristic “reverse slope” of a Ni-Cd cell. Since this characteristic can be disguised by the age, temperature and the number of the cells in a battery, it can never be employed alone;

CCO - This method requires the identification of the particular battery size (capacity) and chemistry, an exclusive Anton/Bauer Logic Series feature. The charger determines the maximum charge time for the particular battery and uses this information to ensure that overcharge conditions are avoided.

FUL - This determination is made when a fully charged DIGITAL battery is returned to a charger within specified parameters of time, temperature, and battery voltage. The DIGITAL battery communicates its fully charged condition and the charger confirms the parameters and immediately indicates a fully charged condition, without additional verification.

TEMPERATURE COMPENSATED VCO – For HyTRON series of batteries. Optimizes VCO cutoff to operate only within certain temperature parameters.

2. **Stage Two** charging is a BALANCING or “equalize” mode which calculates each battery pack type to offset any imbalance of the battery’s cells, created by unequal self discharge or any capacity mismatch of the individual cells in the pack. This stage can vary in duration from zero to as much as 16 hours, depending on the condition of the battery. A battery will typically leave Stage Two in 2-4 hours under average operating conditions.
3. **Stage Three** charging is the Anton/Bauer exclusive Lifesaver maintenance mode. This patented pulse routine keeps batteries fully charged, free from self-discharge - indefinitely - without damaging heat associated with a so-called “trickle charge”.


NOTE: Anton/Bauer strongly recommends that batteries are kept on a charger until ready for use. The Lifesaver mode will keep them 100% charged and ready for use.

LED Indications

The TITAN 70 has three LEDs (one red, two green). One green LED indicates AC line voltage status. If the green status LED is steady, then line voltage is present. If the green status LED is flashing, then AC Line voltage has been removed.

The red and green LED's will indicate the charging status of the battery. The following table identifies all of the LED indications and their meaning:

LED INDICATION	MEANING
Alternating Red & Green	Indicates that the TITAN 70 is evaluating the battery and/or communicating with a DIGITAL battery, loading battery parameters and determining the appropriate charge routine. A low voltage (<11V) battery will cause this indication to continue until the battery is "rejuvenated" to a safe charging voltage. NOTE: This indication will continue if a non-Anton/Bauer Logic Series battery is mounted on the charger. These batteries cannot identify themselves to the TITAN 70 and will not be charged.
Steady Red	Indicates that the battery is being held by the TITAN 70 to stabilize an out-of-range temperature condition.
Flashing Red	Indicates that the battery is currently under Stage One charge.
Flashing Green (slow rate)	Indicates that the battery is currently under Stage Two charge.
Flashing Green (fast rate)	Indicates a fully charged DIGITAL battery is placed on the charger and a FUL cutoff condition cannot be met. The charger is VERIFYING that the battery is in a full charge condition.
Steady Green	Indicates that the battery is READY and in Stage Three Lifesaver mode.

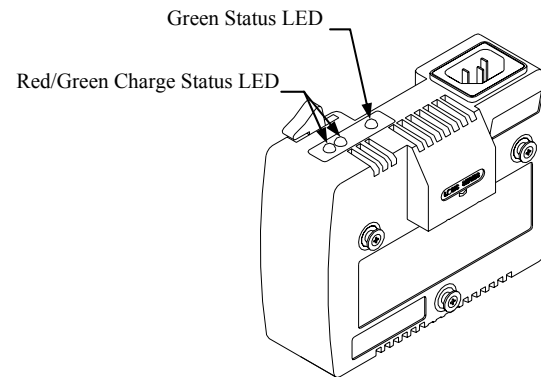

OPERATION AS DC CAMERA SUPPLY FROM MAINS

The TITAN 70 will automatically operate as a DC power supply once the camera, or other device is turned on. There are no switches, it is fully automatic. The single green LED will light indicating that the unit is operating as a power supply.

A battery may be attached to TITAN 70 while mounted to a camera. With the camera OFF, the battery will charge. When camera is turned ON, TITAN 70 will supply power to camera remembering the point at which it left charging. When camera is turned off, TITAN 70 will again resume battery charging.

If AC line voltage is removed from the TITAN 70, and a charged battery is mounted on the unit, power from the battery will be routed to the camera. When AC line voltage is restored, the battery will be re-evaluated for a proper charge routine.

TIP: When camera is used on stakeout, (such as indoors on a tripod) mounting a battery to the TITAN 70 allows instant switching to handheld.

WARNING: DO NOT OPERATE THIS UNIT IN THE RAIN.

POWER LOSS

If AC power is lost during operation the unit will function in the following manner:

- When charging a battery, the green status LED will blink once every three seconds.
- When powering a camera with a battery applied, the green status LED will blink once every three seconds.
- When powering a camera and no battery is applied, no LEDs will be lit.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This equipment has been approved by one or more agencies. All changes and/or modifications not expressly approved by Anton Bauer, Inc. could void the users' warranty and authority to operate this equipment. There are no serviceable parts in this equipment.

SPECIFICATIONS

Size	5.2" x 4.03" x 2.19"
Weight	16oz (1 lb.)
Input Voltage	90-250VAC 50/60 Hz
Output Voltage	16.4 VDC
Fuse Rating	7 amp Surface Mount
Maximum Power	70 watts at 16.4 volts

FUSE/TYPE REPLACEMENT

The fuse of the TITAN 70 is a PCB mounted device which should only be replaced by a qualified service technician.

WARRANTY

IMPORTANT: PLEASE MAIL WARRANTY REGISTRATION CARD WITHIN TEN (10) DAYS OF PURCHASE. We must have this card on file at our SERVICE DEPARTMENT to establish this warranty. Proper registration will also enable us to provide update information on the battery system.

All new Anton/Bauer products have been thoroughly tested and inspected prior to shipment. This product is warranted against defect in materials and workmanship for a period of one (1) year from date of purchase. If this product fails to perform to its specifications during this period, it will be repaired or replaced at Anton/Bauer's option. This Warranty does not cover damage resulting from accident, misuse, neglect, or improper service or maintenance. Use of unauthorized service replacement parts or attachments will void this Warranty. Misuse includes any use of this product in other than its intended applications. No responsibility is assumed for any special, incidental or consequential damages. No other Warranty, written, oral or implied is assumed or authorized by Anton/Bauer. The liability of Anton/Bauer hereunder is expressly limited to a claim for a repair or replacement for the goods sold or as otherwise stated herein.


This Warranty is to be construed and enforced in accordance with the law of the State of Connecticut, including the provisions of the Uniform Commercial Code as adopted and, from time to time, amended in the State of Connecticut and not the Convention for the International Sale of Goods. This choice of Connecticut law is exclusive of any Connecticut law that would require reliance on any law foreign to Connecticut. Should any action of law or in equity be brought by any person under this Warranty, such action shall be brought only in the United States District Court for the District of Connecticut, or in any Superior Court in Fairfield County, Connecticut, U.S.A.

If you have any questions regarding applications or specifications, or to obtain warranty service on this or any Anton/Bauer product, contact the Anton/Bauer Customer Service Department. See back page for contact information.

One or more of the following patents may apply:

4,810,204
4,822,296
4,965,738
5,057,383

Other patents, U.S. and International may apply or are pending.

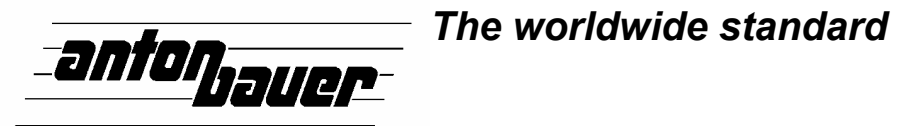

The following are registered trademarks of Anton/Bauer, Inc.:

ACS, Anton/Bauer, Anton/Bauer Logo, Automatique, ComPac, Gold Mount, HyTRON, Impac, InterActive, InterActive 2000 Logo, LifeSaver, Logic Series, Logic Series Logo, PowerStrap, ProPac, SSP, Satellight, Snap On, The worldwide standard, TITAN, Triconn, TrimPac, Ultralight, Ultrakit

Anton/Bauer, Inc.

World Headquarters

14 Progress Drive, Shelton, CT U.S.A.
Tel (203) 929-1100 or (800) 541-1667
Fax (203) 929-9935
support@antonbauer.com

Anton/Bauer Europe, B.V.

Eurode Business Center, Eurode - Park 1

6461KB Kerkrade, The Netherlands
Tel +31 45-563-9220
Fax +31 45-563-9222
eurosupport@antonbauer.com

www.antonbauer.com